LifeFitness

ARCTIC SILVER 93C Upright Bike

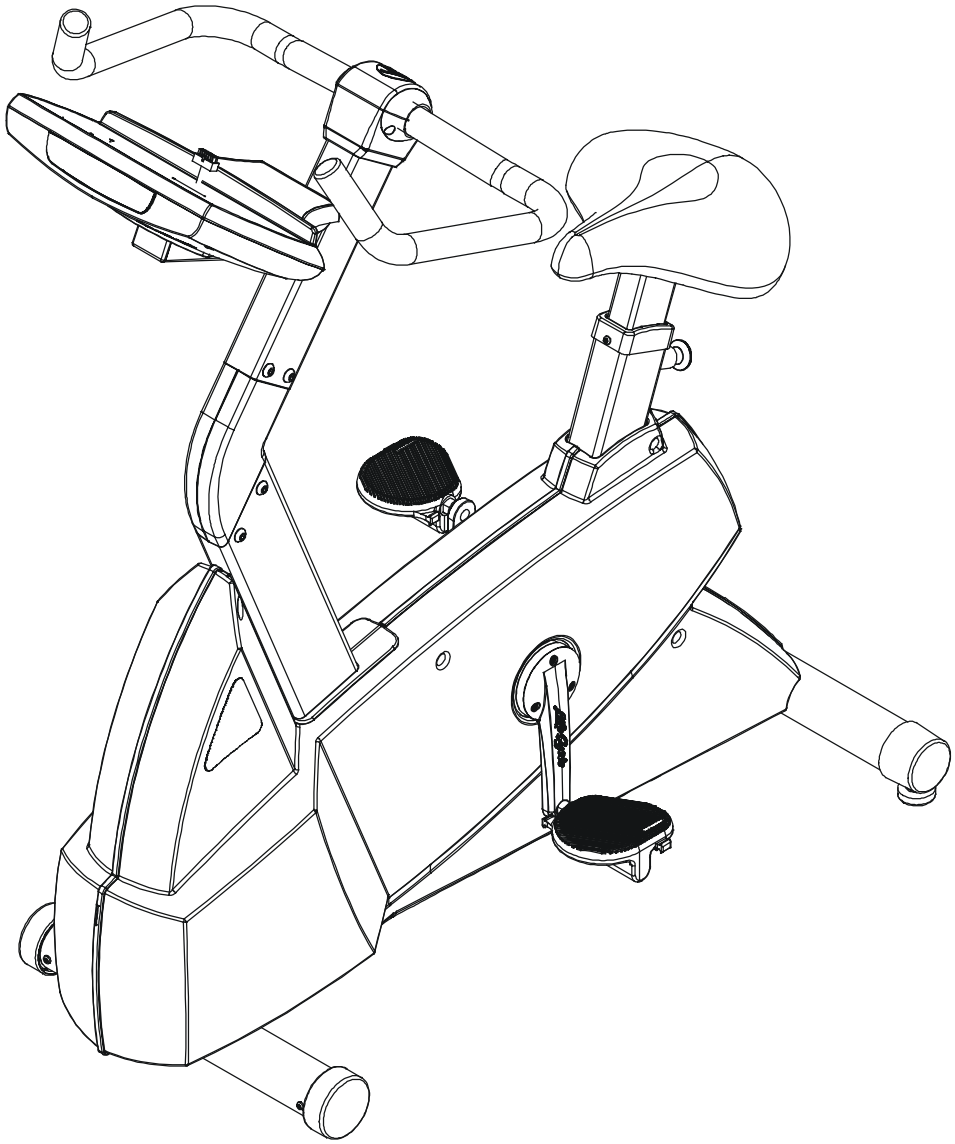

Customer Support Services

PARTS MANUAL

OPERATION MANUAL	M051-00K63-A068
HARDWARE BAG	GK63-00002-0044
NETWORK C-SAFE KIT	GK63-00002-0003
TOUCH UP PAINT: SPRAY CAN .5 OZ BOTTLE W/APPLICATOR .33 OZ PEN	 0017-00008-0204 0017-00008-0205 0017-00008-0206
SERVICE MANUAL	M051-00K63-A009

Page

CONSOLE AND RELATED COMPONENTS....4

CONSOLE MOUNTING SCREWS AND POLAR COVERS....5

ALTERNATOR W/PULLEY 6

CRANKSHAFT AND BEARING ASSEMBLY....7

INTERMEDIATE SHAFT AND BEARING ASSEMBLY....8

SEAT LATCH ASSEMBLY 9

SEAT POST ASSEMBLY 10

SEAT POST SHROUDS....11

IDLER BRACKET ASSEMBLY....12

CONSOLE SUPPORT ASSEMBLY....13

LEFT SIDE SHROUD AND CRANKARM 14

RIGHT SIDE SHROUD AND CRANKARM....15

PCB MOUNTING BRACKET ASSEMBLY....16

FRONT WHEELS....17

RESISTOR ASSEMBLY....18

HANDLEBAR ASSEMBLY....19

BELTS....20

CABLES....21

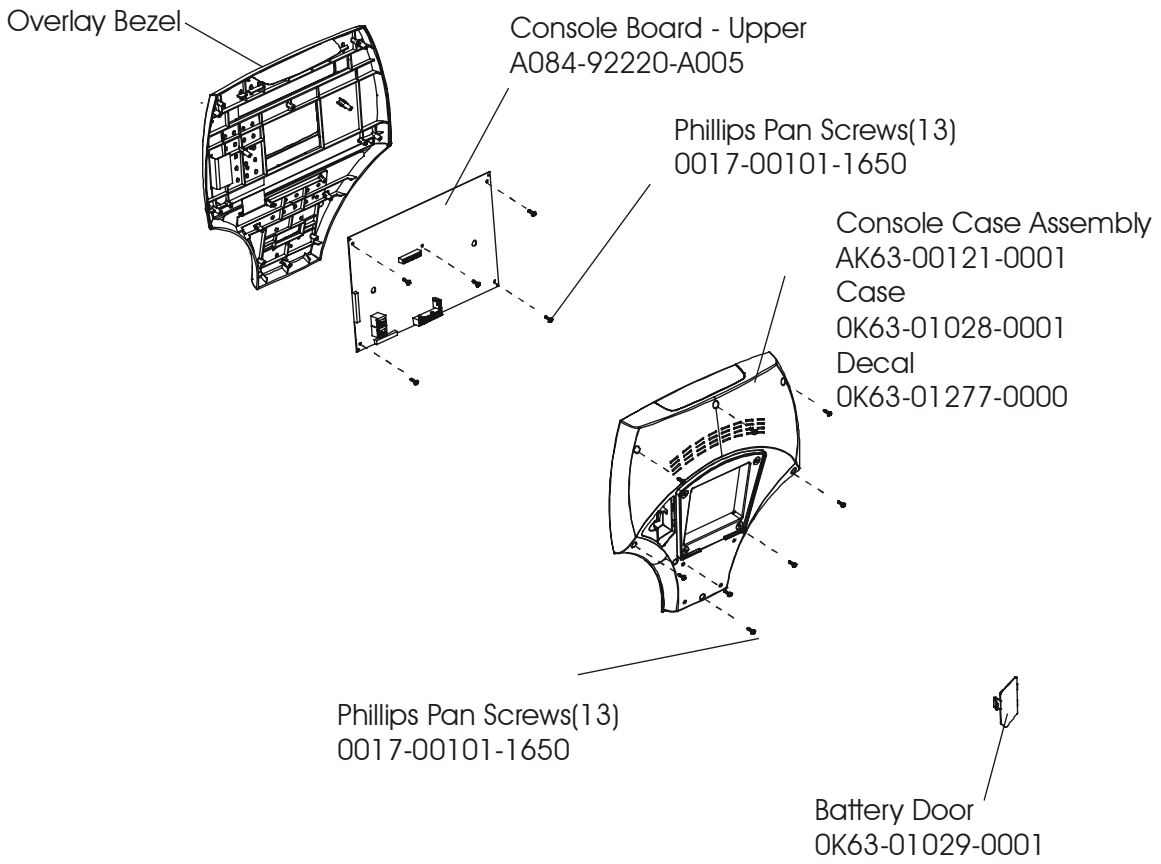

Console Assembly	Bezel W/Overlay Assy.
AK63-00161-0001 Eng Met	AK63-00166-0001 Eng Met
AK63-00161-0003 Ger Met	AK63-00166-0003 Ger Met
AK63-00161-0004 Spn Met	AK63-00166-0004 Spn Met
AK63-00161-0006 Jap Met	AK63-00166-0006 Jap Met
AK63-00161-0007 Frn Met	AK63-00166-0007 Frn Met
AK63-00161-0008 Itl Met	AK63-00166-0008 Itl Met
AK63-00161-0009 Dut Met	AK63-00166-0009 Dut Met
AK63-00161-0010 Por Met	AK63-00166-0010 Por Met

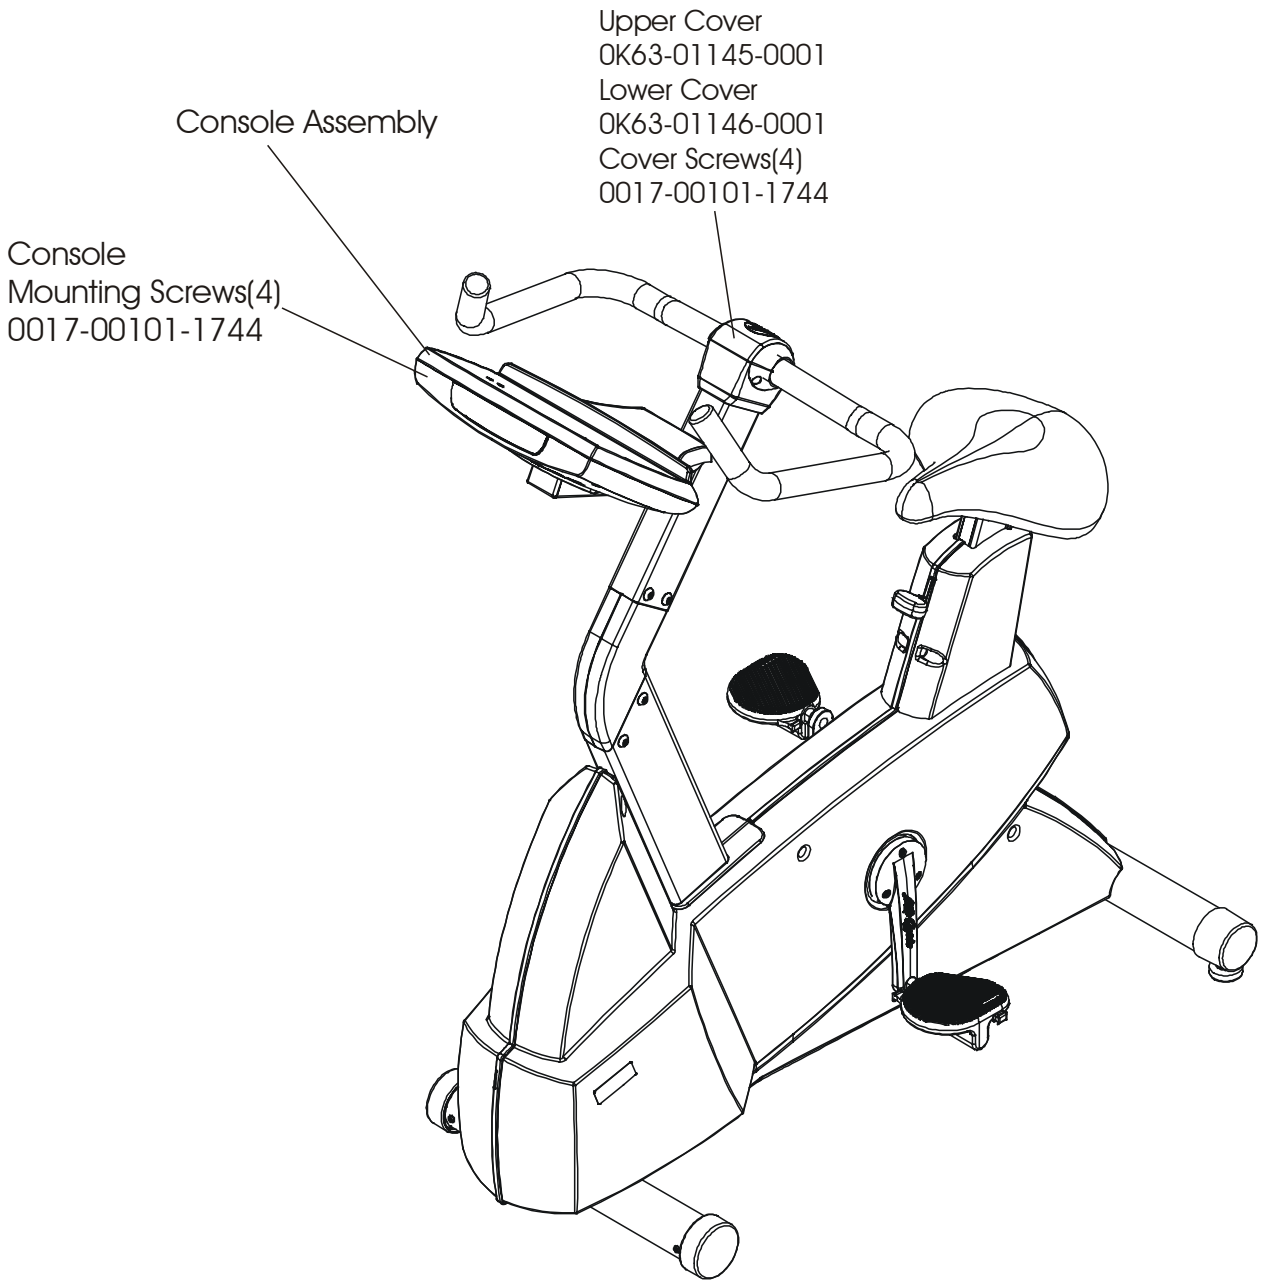
Upper Cover
0K63-01145-0001
Lower Cover
0K63-01146-0001
Cover Screws(4)
0017-00101-1744
Console Assembly
Console
Mounting Screws(4)
0017-00101-1744

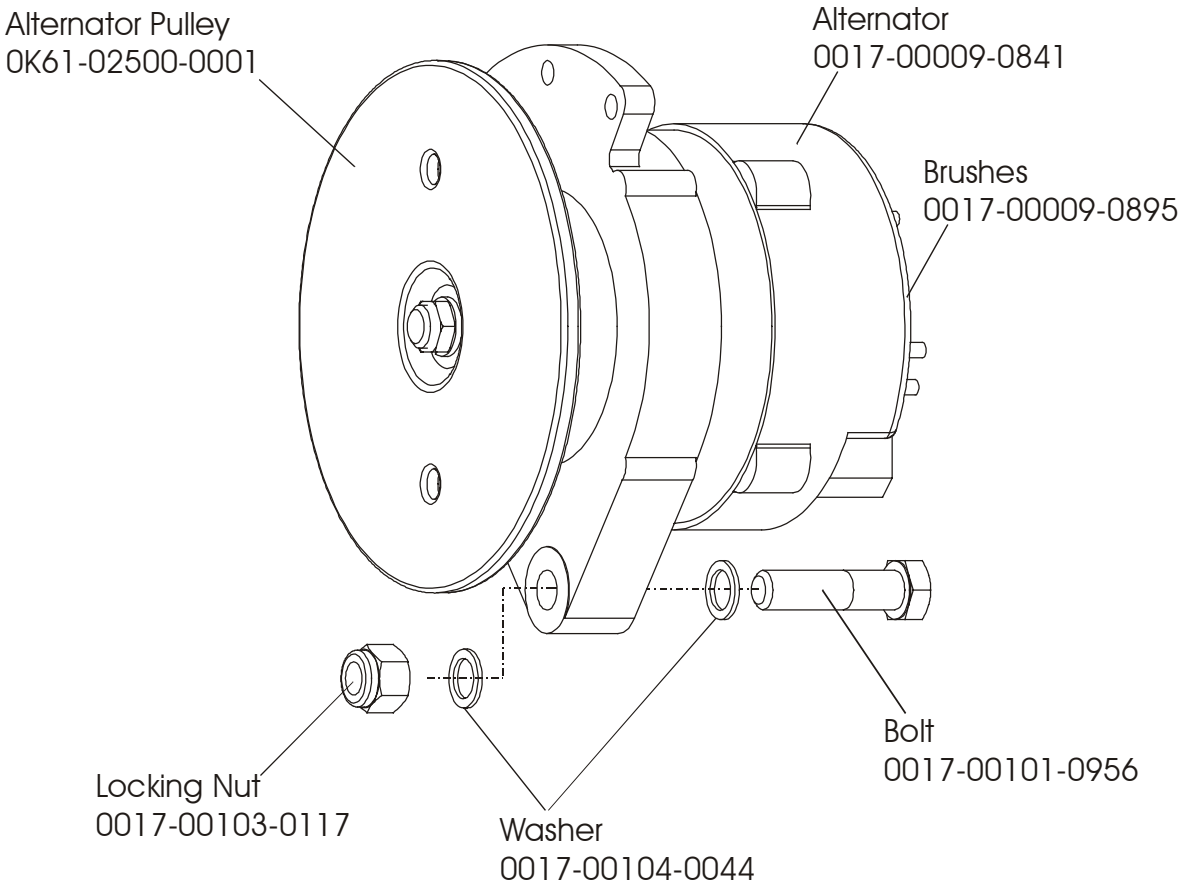
Alternator Pulley
0K61-02500-0001
Alternator
0017-00009-0841
Brushes
0017-00009-0895
Bolt
0017-00101-0956
Locking Nut
0017-00103-0117
Washer
0017-00104-0044

Crankshaft and Bearing Assembly

S/N CCL100000 and up

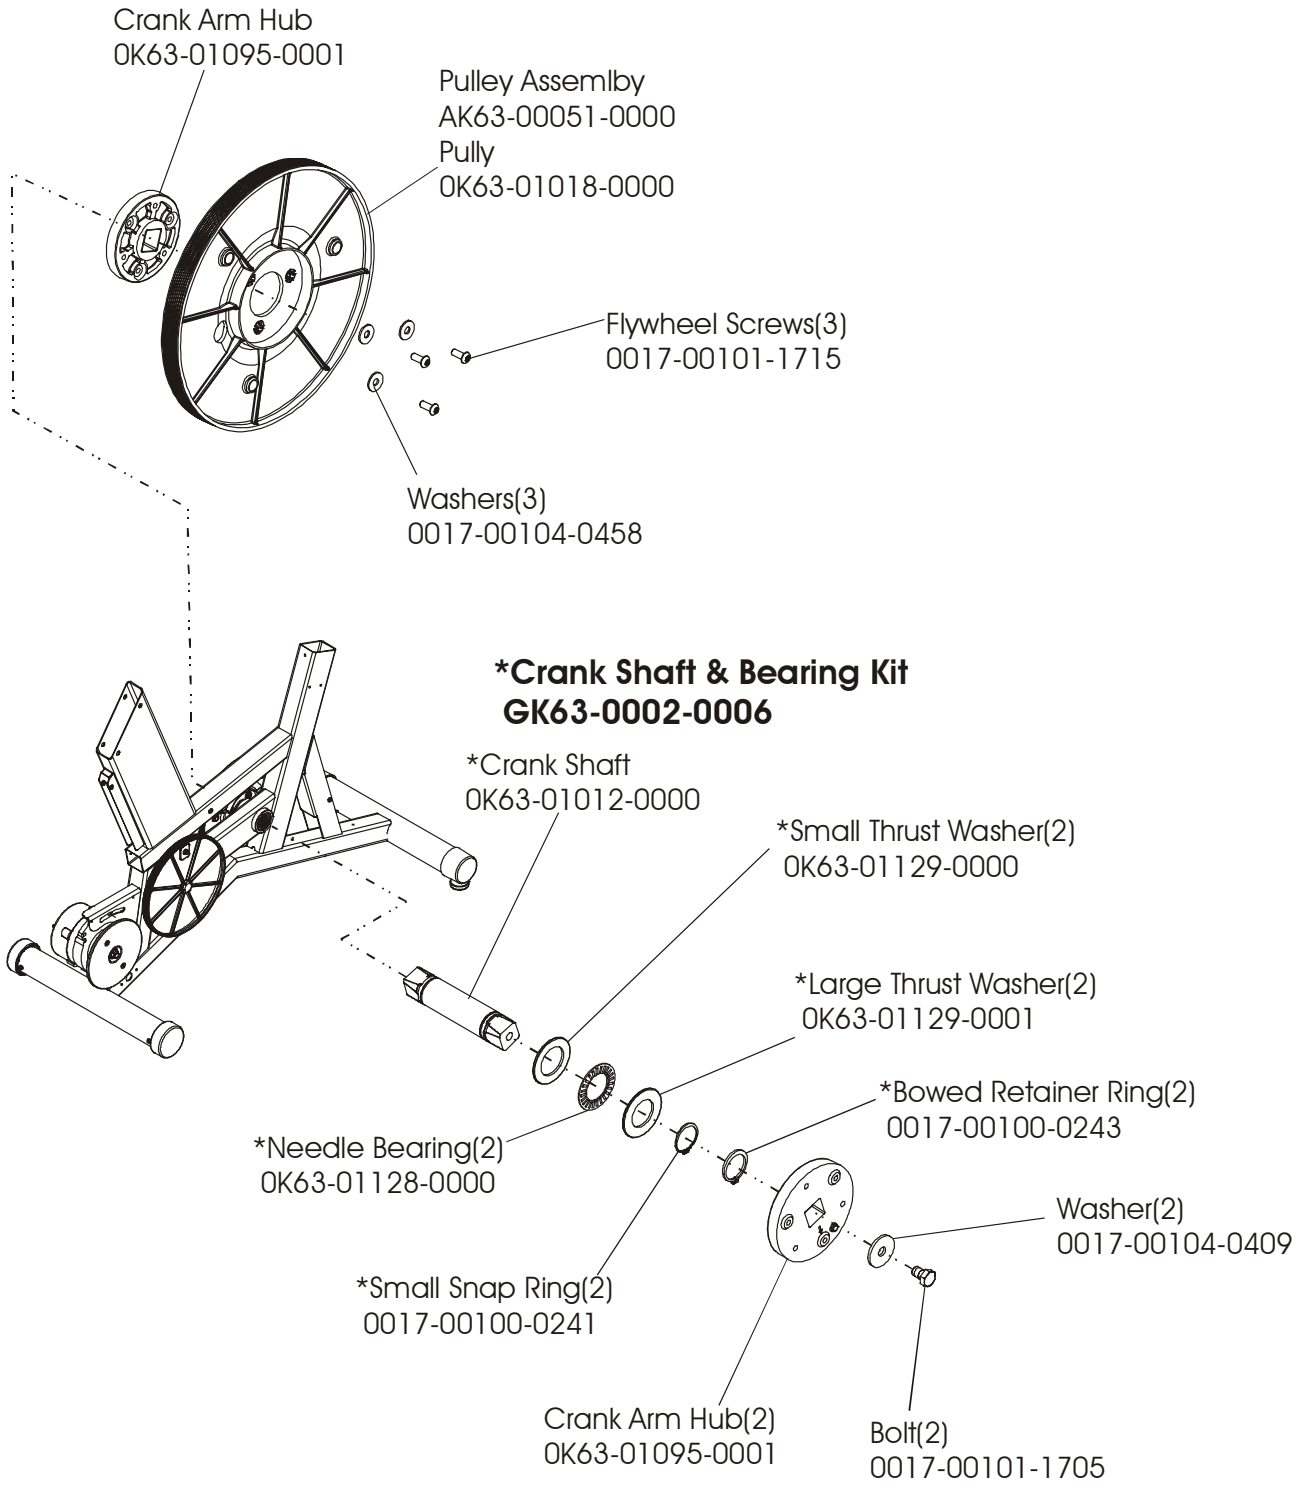

Kit number – GK63-00002-0007

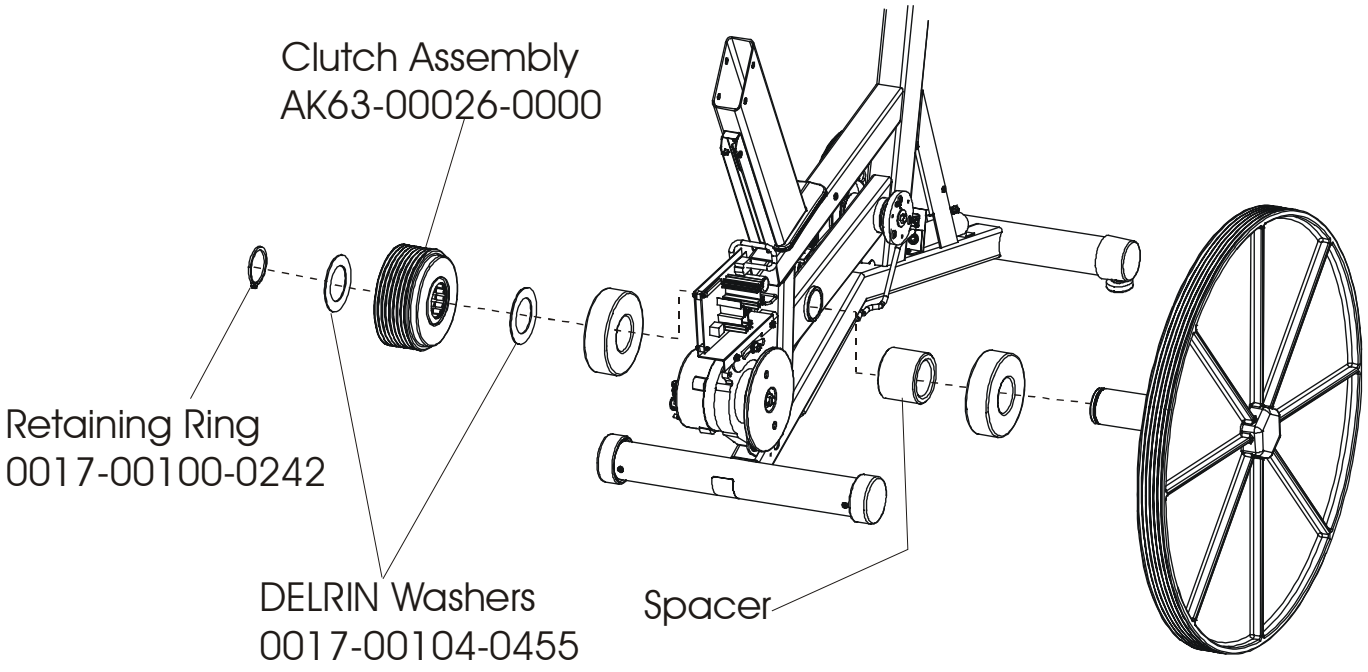

Seat Latch Assy. -AK63-00043-0001 **S/N CCL100000 and up**

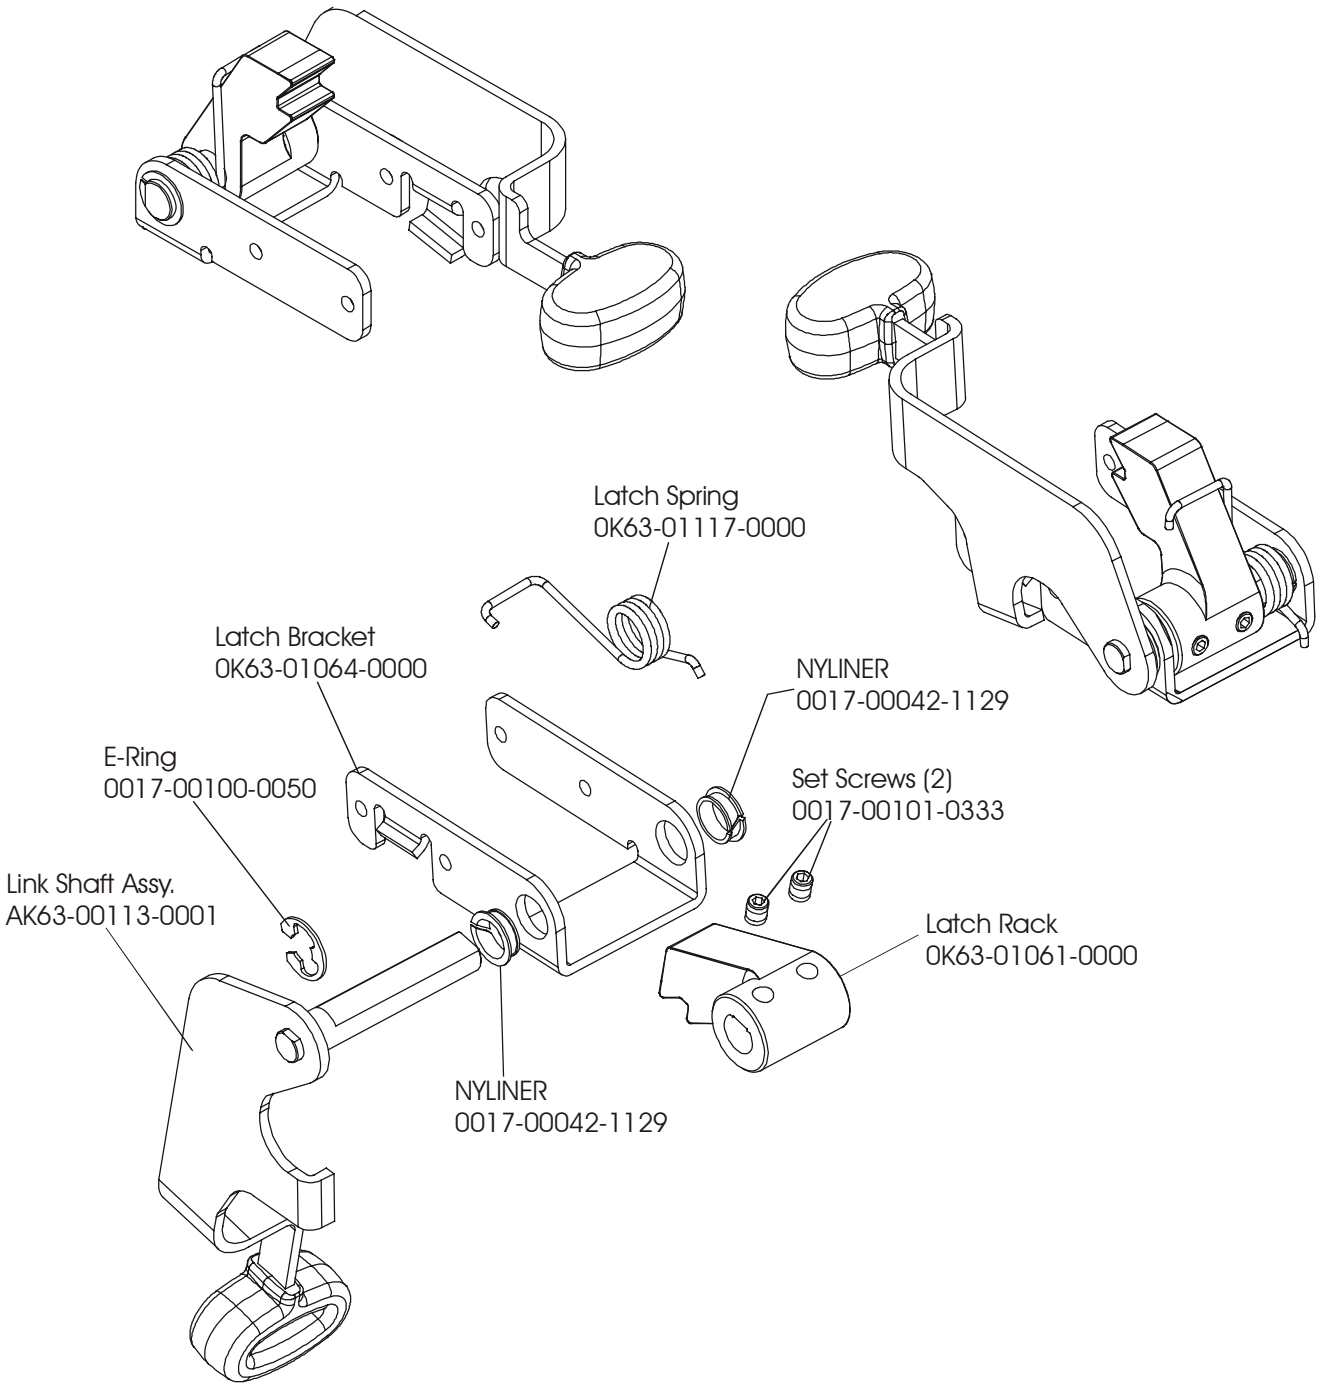

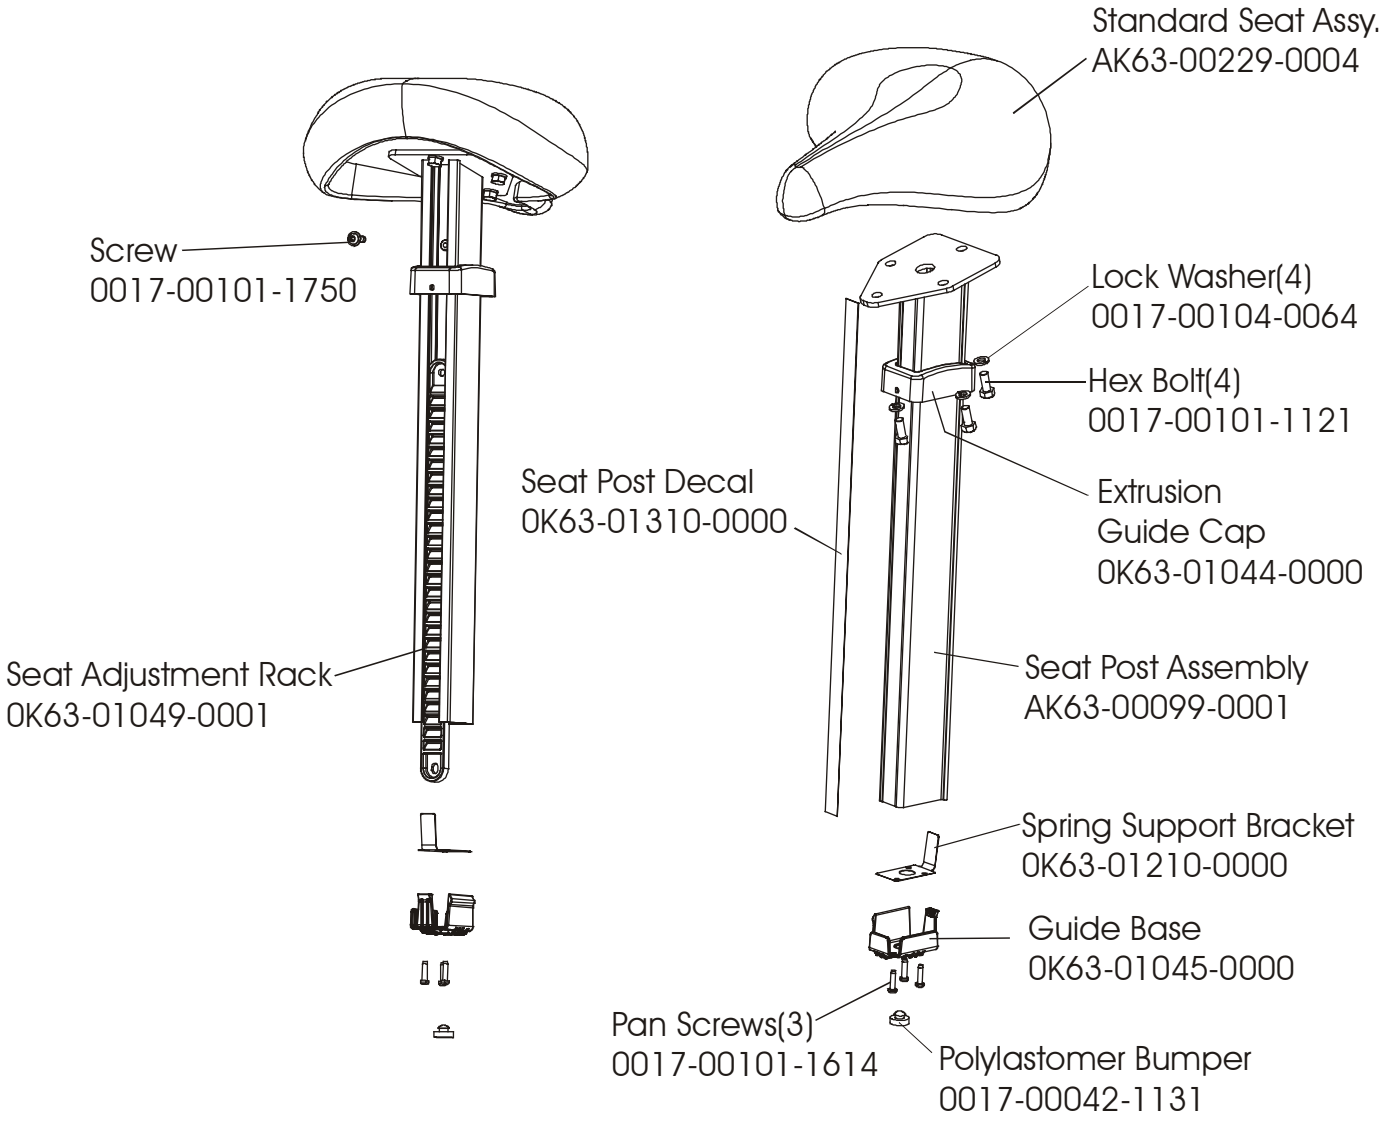
Standard Seat Assy.
AK63-00229-0004
Screw
0017-00101-1750
Lock Washer(4)
0017-00104-0064
Hex Bolt(4)
0017-00101-1121
Seat Post Decal
0K63-01310-0000
Extrusion
Guide Cap
0K63-01044-0000
Seat Adjustment Rack
0K63-01049-0001
Seat Post Assembly
AK63-00099-0001
Spring Support Bracket
0K63-01210-0000
Guide Base
0K63-01045-0000
Pan Screws(3)
0017-00101-1614
Polylastomer Bumper
0017-00042-1131

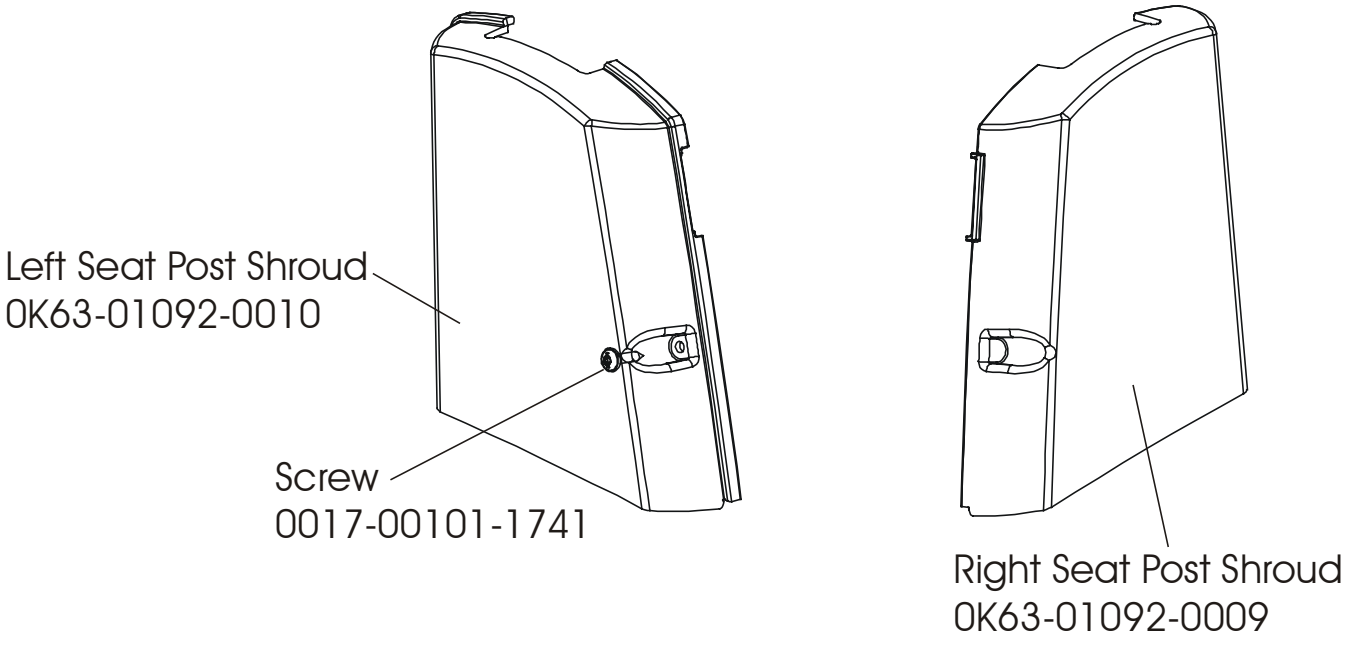
Left Seat Post Shroud
0K63-01092-0010
Screw
0017-00101-1741
Right Seat Post Shroud
0K63-01092-0009

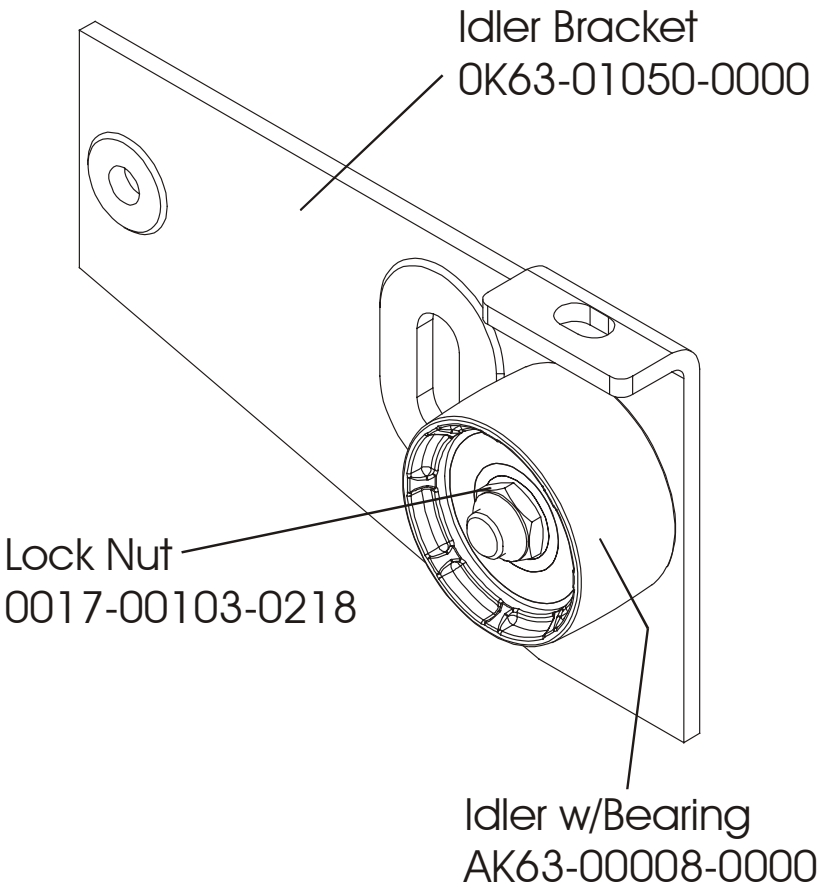
Idler Bracket
0K63-01050-0000
Lock Nut
0017-00103-0218
Idler w/Bearing
AK63-00008-0000

Console Support Assembly

S/N CCL100000 and up

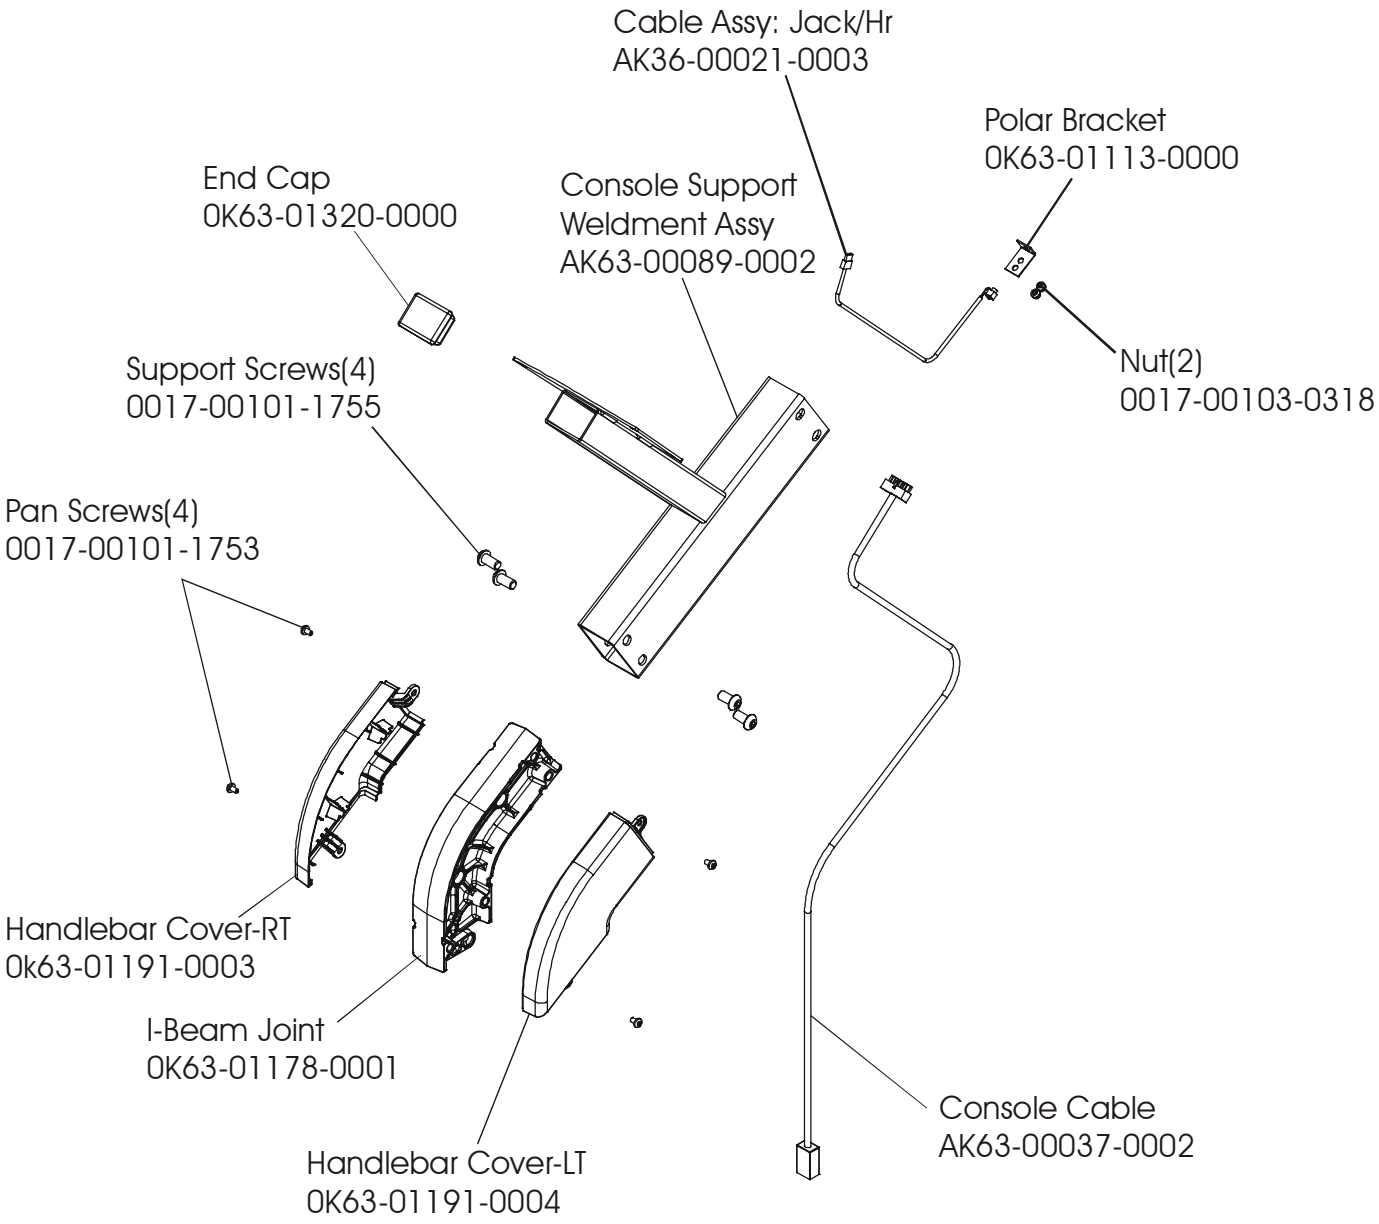

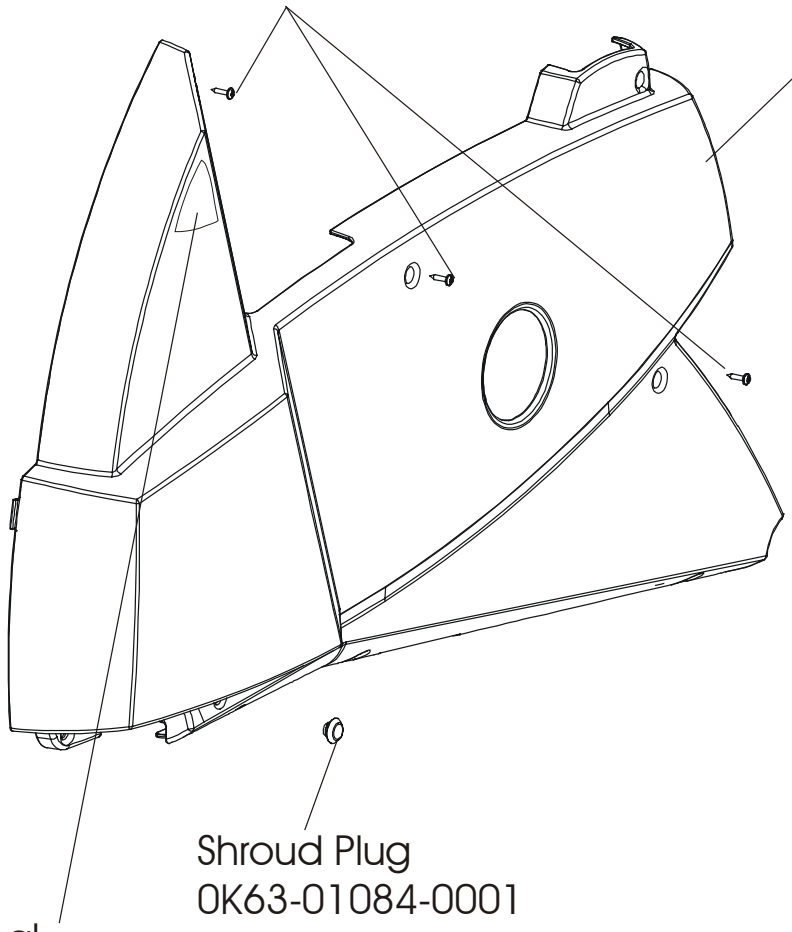

Shroud Screws(3)
0017-00101-1741

Left Side Shroud
AK63-00177-0002

Crank Arm Screws(3)
0017-00101-1855

Crank Arm, LT
0K39-01042-0008

Shroud Plug
0K63-01084-0001

Decal
0K63-01314-0000

Left Pedal
AK63-00124-0004

Left Pedal Strap
0K63-01238-0004

Right Side Shroud and Crankarm **S/N CCL100000 and up**

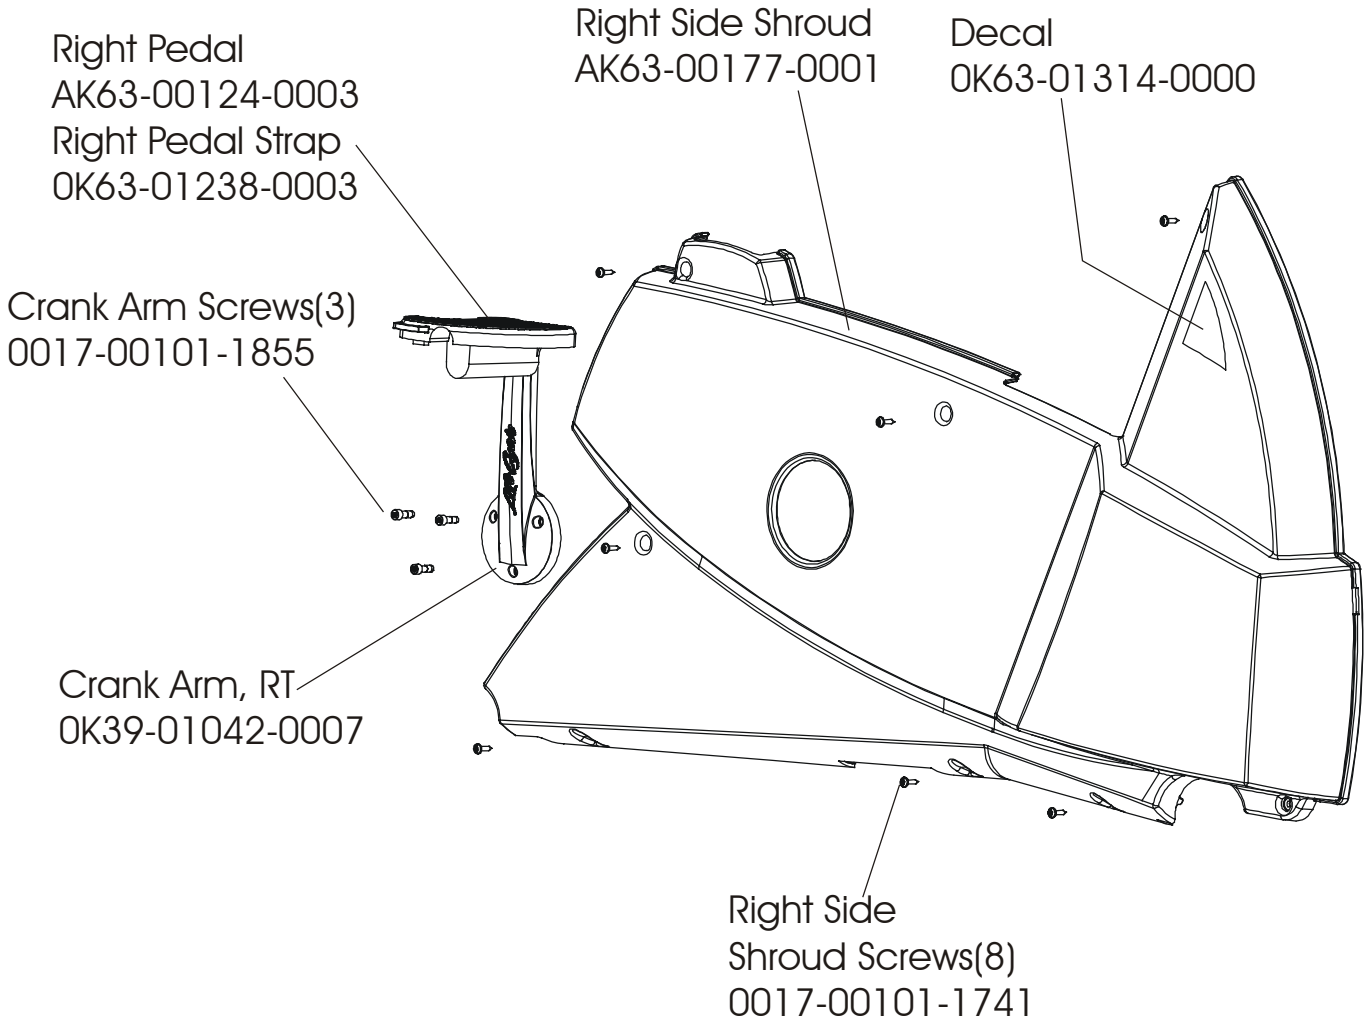

PCB Mounting Bracket Assembly S/N CCL100000 and up

Assembly Number – AK63-00049-0000

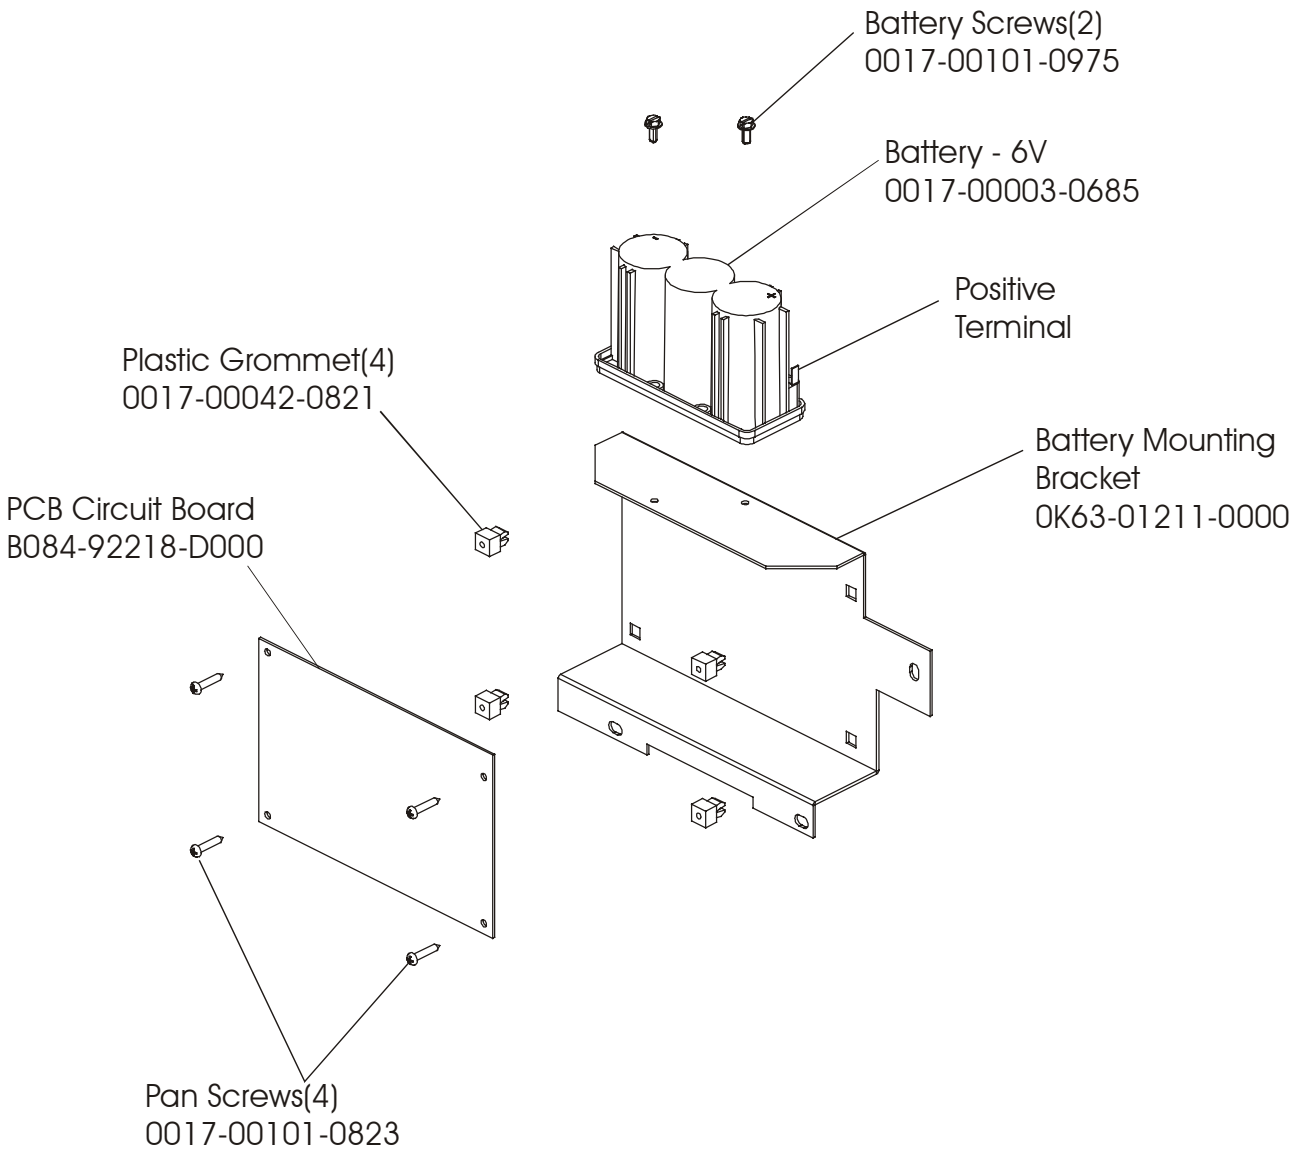

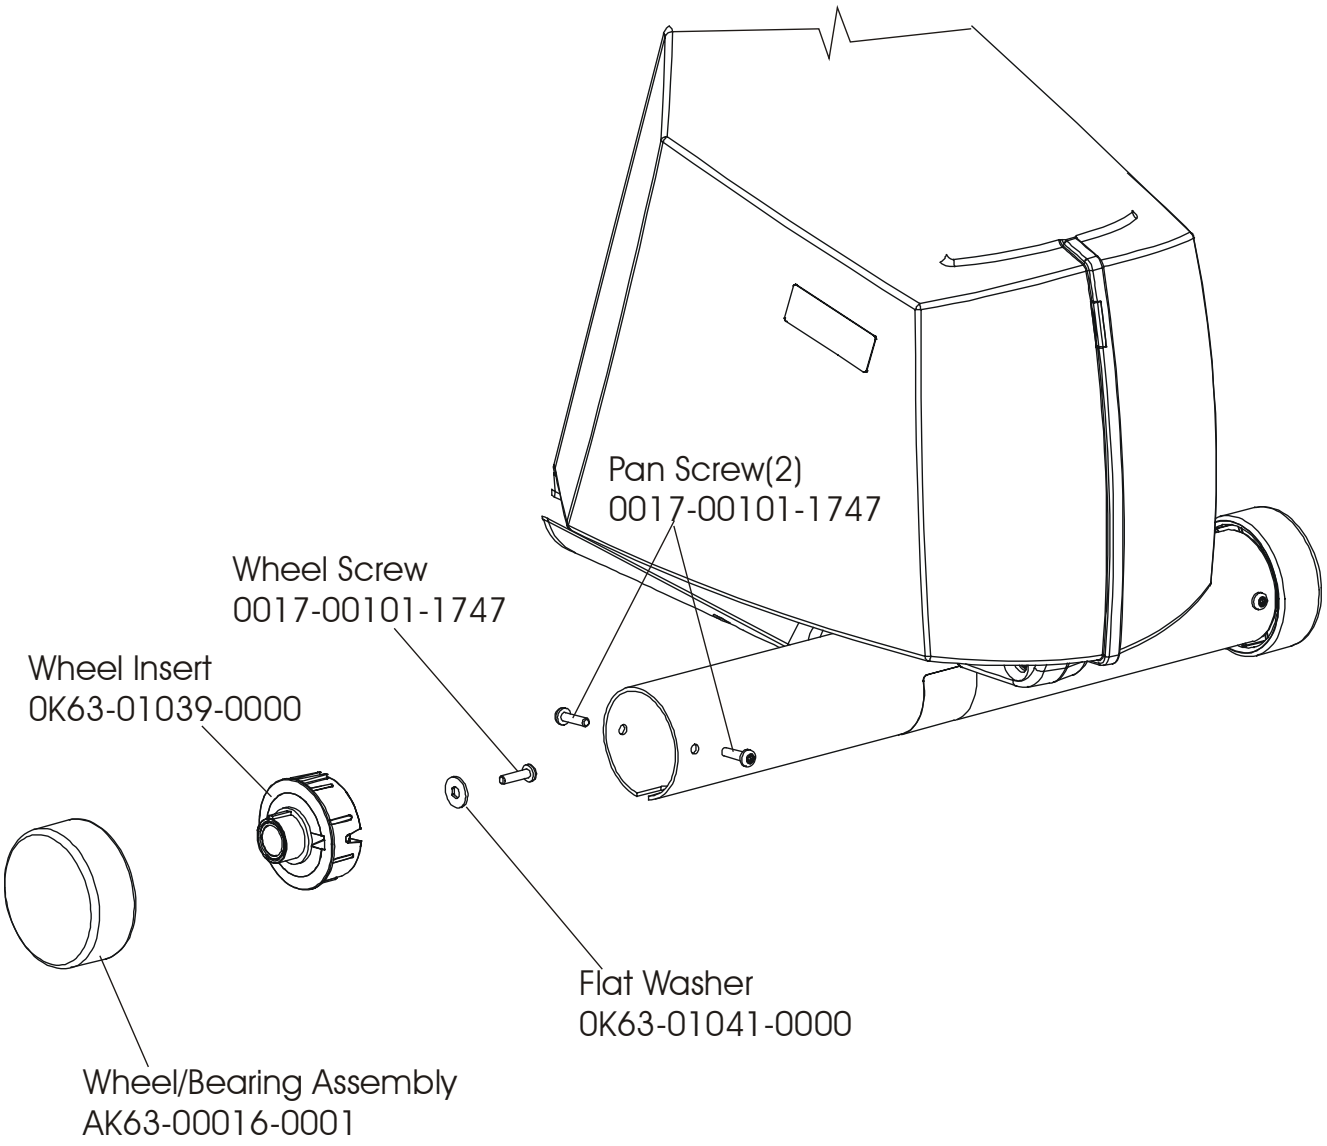
Pan Screw(2)
0017-00101-1747
Wheel Screw
0017-00101-1747
Wheel Insert
0K63-01039-0000
Flat Washer
0K63-01041-0000
Wheel/Bearing Assembly
AK63-00016-0001

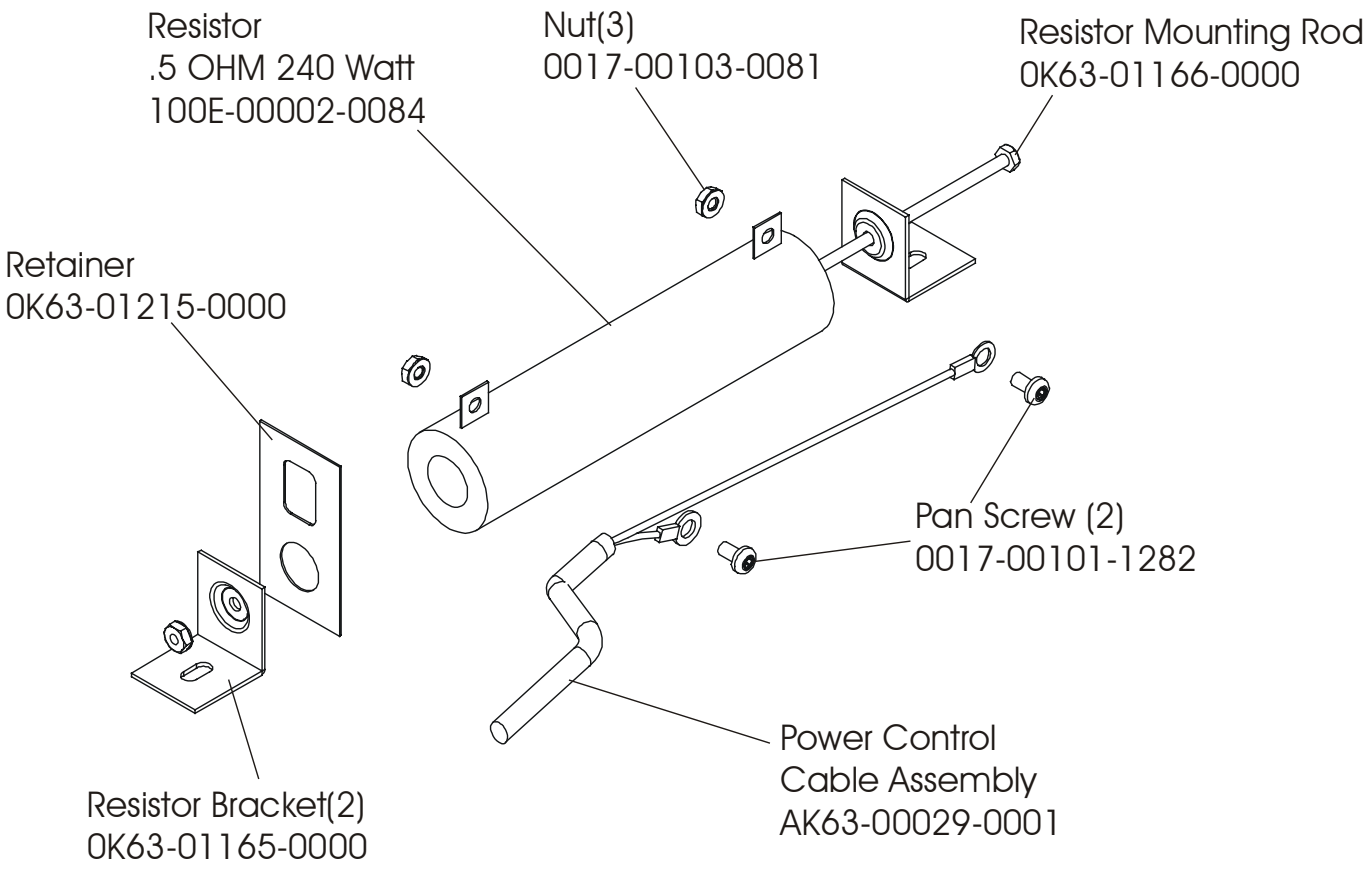
Resistor
.5 OHM 240 Watt
100E-00002-0084
Nut(3)
0017-00103-0081
Resistor Mounting Rod
0K63-01166-0000
Retainer
0K63-01215-0000
Pan Screw (2)
0017-00101-1282
Power Control
Cable Assembly
AK63-00029-0001
Resistor Bracket(2)
0K63-01165-0000

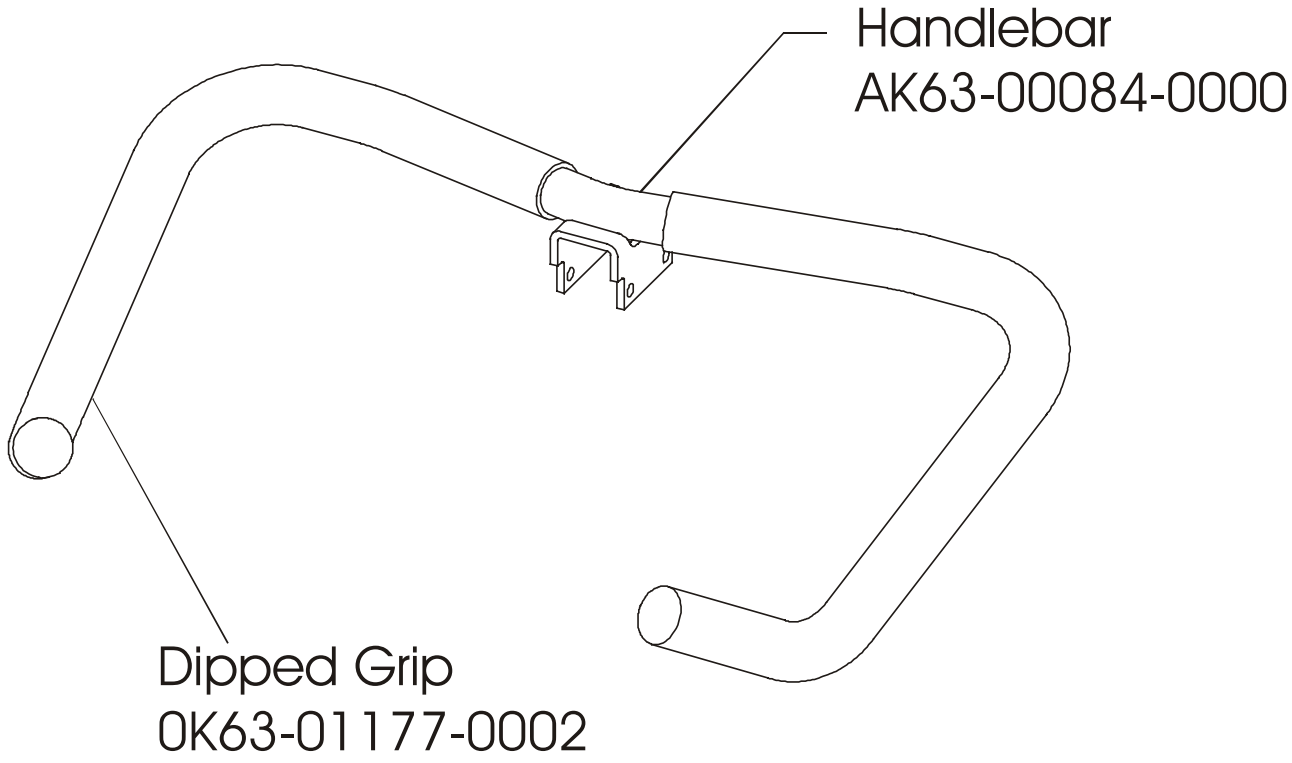
Handlebar
AK63-00084-0000
Dipped Grip
0K63-01177-0002

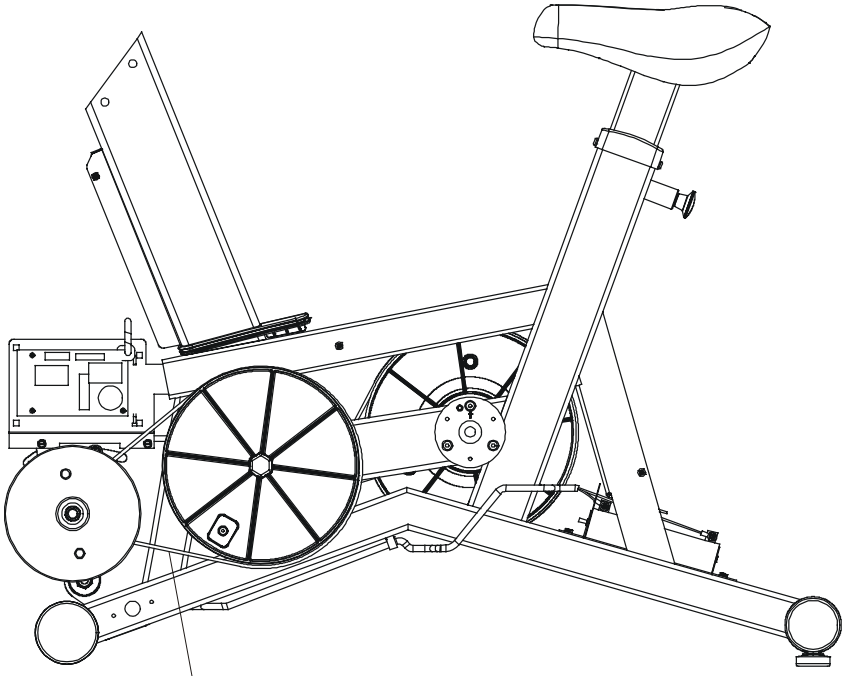

Alternator Belt
0K63-01065-0000

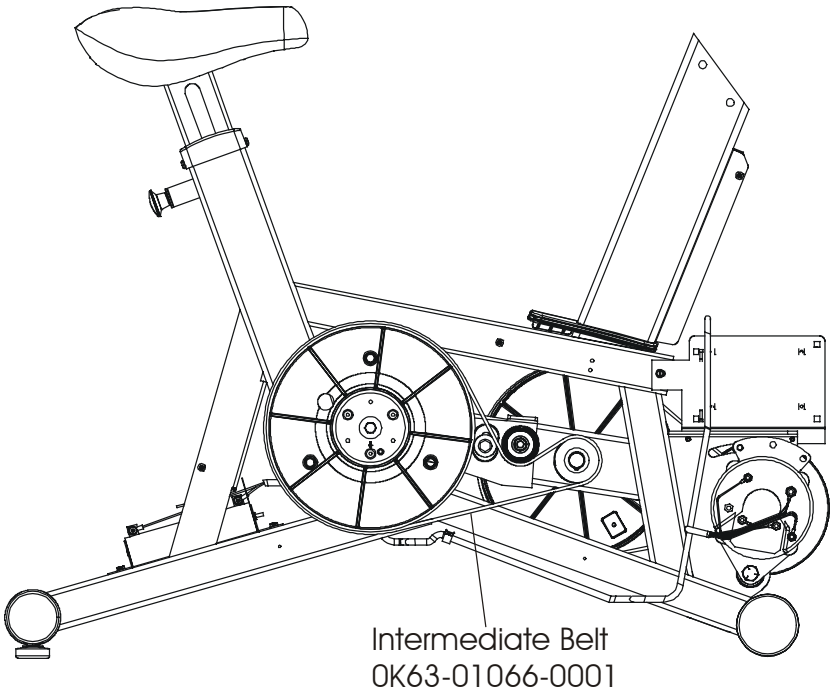

Intermediate Belt
0K63-01066-0001

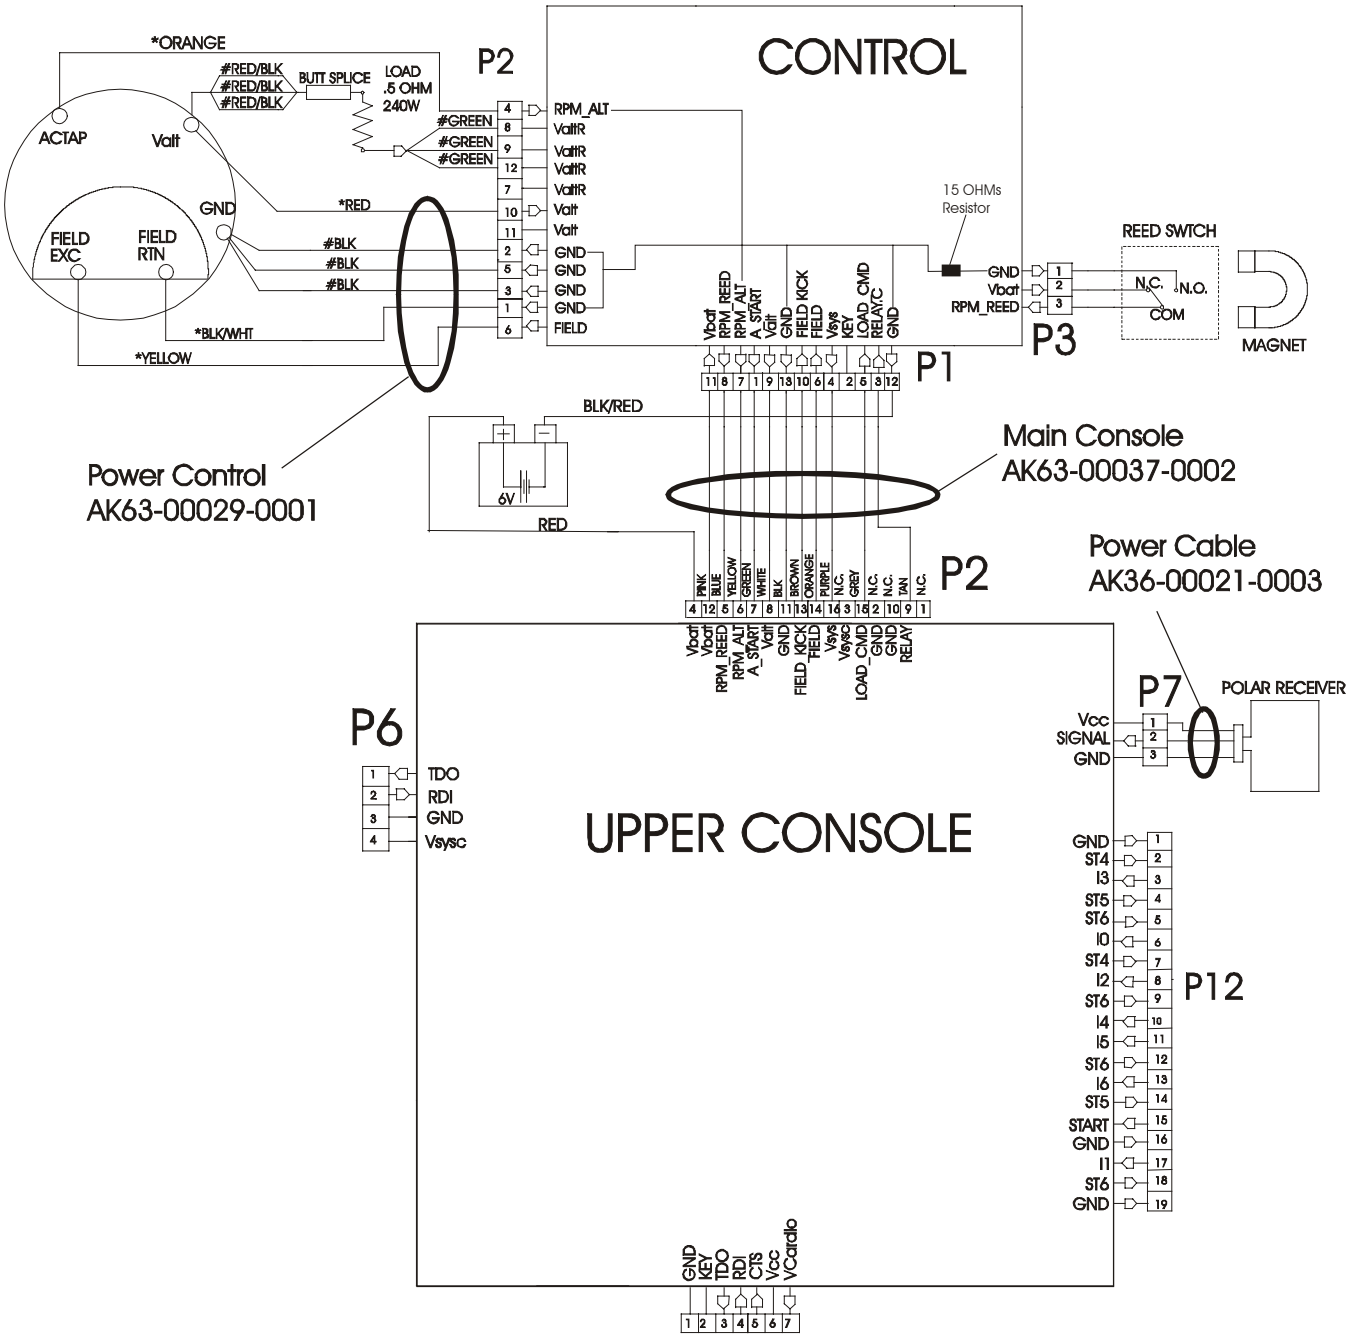
CONTROL
P2
*ORANGE
#RED/BLK
#RED/BLK
#RED/BLK
BUTT SPLICE
LOAD
.5 OHM
240W
#GREEN
#GREEN
#GREEN
ACTAP
Valt
GND
FIELD
EXC
FIELD
RTN
*RED
#BLK
#BLK
#BLK
*BLK/WHT
*YELLOW
RPM_ALT
ValtR
ValtR
ValtR
ValtR
Valt
Valt
GND
GND
GND
GND
FIELD
15 OHMs
Resistor
REED SWITCH
GND
Vbat
RPM_REED
N.C.
N.O.
COM
MAGNET
P3
P1
Vbat
RPM_REED
RPM_ALT
A_START
Valt
GND
FIELD KICK
FIELD
Vsys
KEY
LOAD_CMD
RELAY.C
GND
BLK/RED
6V
RED
Power Control
AK63-00029-0001
Main Console
AK63-00037-0002
Power Cable
AK36-00021-0003
P2
PINK
BLUE
YELLOW
GREEN
WHITE
BLK
BROWN
ORANGE
PURPLE
N.C.
GREY
N.C.
N.C.
TAN
N.C.
Vbat
Vbat
RPM_REED
RPM_ALT
A_START
Valt
GND
FIELD_KICK
FIELD
Vsys
Vsysc
LOAD_CMD
GND
GND
RELAY
P7
POLAR RECEIVER
Vcc
SIGNAL
GND
P6
TDO
RDI
GND
Vsysc
UPPER CONSOLE
GND
ST4
I3
ST5
ST6
I0
ST4
I2
ST6
I4
I5
ST6
I6
ST5
START
GND
I1
ST6
GND
P12
GND
KEY
TDO
RDI
CTS
Vcc
VCardio